



FOR SME BUSINESS

Quick Installation Guide

G-Series FXO VoIP Gateway



G-Series FXO VoIP Gateway

Thank you for using the G-Series VoIP Gateway,
Please read the instructions carefully before using.



G108



G116

ZYCOO G108 and G116 are high-performance FXO analog gateways designed specifically for small and medium-sized enterprises, aiming to deliver high-quality, stable, and reliable voice solutions. The G-Series FXO VoIP Gateways utilize the standard SIP protocol and come equipped with 8/16 FXO ports, enabling seamless integration of telephone lines with VoIP networks. Additionally, these gateways feature advanced routing capabilities to enhance call efficiency and flexibility. In terms of security, both of them utilize TLS protocol encryption technology to ensure safety. The simple deployment, user-friendly operation, and easy management features make the G-Series an ideal choice for communication needs in small and medium-sized enterprises.




CONTENTS

1	Package Contents
2	Hardware Installation
2	Safety Precautions
9	Physical Connection
10	LED Definitions
11	Web GUI Access
11	Auto Discover with Zycoo IPPBX
11	Using LAN/WAN Port
12	Further Information

Package Contents


Thank you for purchasing ZYCOO G-Series VoIP Gateway. These are the items included with your VoIP Gateway purchase:

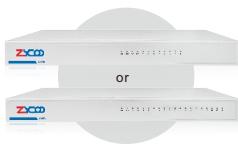

G108/G116 VoIP Gateway
(1 pcs)



Power Adapter(1 pcs)

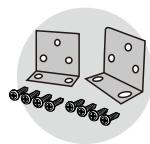

Mounting Brackets
and Fittings(1 pcs)



Network Cable(1 pcs)



Quick Installation Guide
(1 pcs)



Warranty Card
(1 pcs)

Hardware Installation

The followings are the instructions for setting up ZYCOO G108/G116 FXO Gateway. Please refer to the illustration and follow the simple steps below to quickly install your VoIP Gateway.

► Safety Precautions

To avoid any device damage and Body injury caused by improper use, please observe the following rules.

- ① Please make sure that the power is kept off during the whole installation process.
- ② Wear an ESD-preventive wrist strap, and make sure that the wrist strap has a good skin contact and is well grounded.
- ③ The device works only under the correct power supply. Please confirm that the power supply is consistent with the voltage marked by the device, and it is suggested to use the included power supply.
- ④ Before the device is powered on, please confirm that the power circuit will not be overloaded so as not to cause unnecessary damage.
- ⑤ To avoid the risk of electric shock, do not open the casing when the device is working!
- ⑥ Before cleaning the device, cut off the power supply. Do not clean it with a waterish material; never use any other liquid cleaning method.

■ Site Requirements



To ensure normal operation and long service life of the device, please install it in an environment that meets the requirements described in the following subsection.

Please keep a proper temperature and humidity in the equipment room. Too high/low humidity may lead to bad insulation, electricity leakage, mechanical property changes and corosions. Too high temperature may accelerate aging of the insulation materials and can thus significantly shorten the service life of the device. For normal temperature and humidity of the device, please check the following table.

Environment	Temperature	Humidity
Operating	0°C~40°C	10%~90% RH Non-condensing
Storage	-40°C~70°C	5%~90% RH Non-condensing

■ Clearness



The dust accumulated on VoIP Gateway can be absorbed by static electricity and result in poor contact of metal contact points. Some measures have been taken for the device to prevent static electricity, but too strong static electricity can cause deadly damage to the electronic elements on the internal circuit board. To avoid the effect of static electricity on the operation of VoIP Gateway, please attach much importance to the following items:

- ① Dust the device regularly, and keep the indoor air clean.
- ② Keep the device well grounded and ensure static electricity has been transferred.

|| Electromagnetic Interference




Electronic elements including capacitance and inductance on the device can be affected by external interferences, such as conducted emission by capacitance coupling, inductance coupling, and impedance coupling. To decrease the interferences, please make sure to take the following measures:

- ① Use the power supply that can effectively filter interference from the power grid.
- ② Keep the devices far from high-frequency, strong-current devices, such as radio transmitting station.
- ③ Use electromagnetic shielding when necessary.


I Rack Installation

To install the device in an EIA standard-sized, 19-inch rack, follow the instructions described below:

- ① Check the grounding and stability of the rack.
- ② Secure the supplied rack-mounting brackets to each side of the device with supplied screws as illustrated in the following figure.

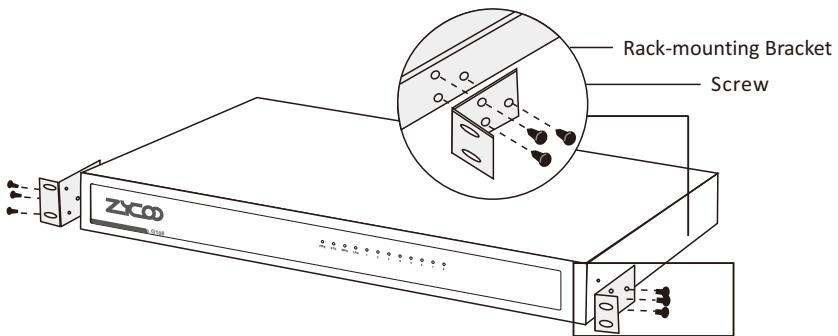

- ③ Install VoIP Gateway to the right place in the rack, and then attach the brackets to the device.

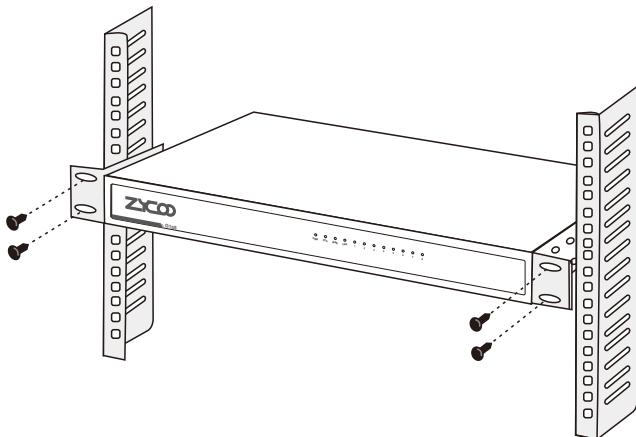


- ③ After the brackets are attached to the device, use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

Notes:


1. Please ensure the correct installation for the grounding of the rack, which is the most important guarantee of avoiding ESD, electricity leakage, lightening, and electromagnetic interference;
2. Please mount devices in sequence from the bottom to top of the rack to avoid overloading;
3. Please avoid any heavy things placed on the device to prevent any unexpected accidents;
4. Please ensure heat dissipation and air circulation;
5. Recommended installation height not exceeding 2 metres.

1 Connect to Ground

- 1 Connecting the device to ground is to quickly release the lightning over-voltage and over-current of the device, which is also a necessary measure to prevent human injury from electric shock.
- 2 In different environments, the device may be grounded differently. Two measures are given in the following, of which the Grounding bar is better for the protection of lightening. Users can try to choose the most appropriate measure according to different situation.
- 3 If the VoIP Gateway is installed in the machine room, and the room has dedicated Grounding bar, then the using of ground wire to connect the device with the Grounding bar is put to the first consideration as shown in the following figure.

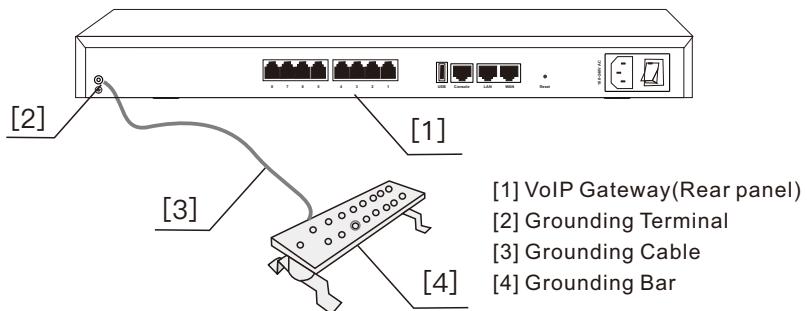

- ④ If the device is installed in the normal environment, the device can be grounded via the PE (Protecting Earth) cable of the AC power supply as shown in the following figure.

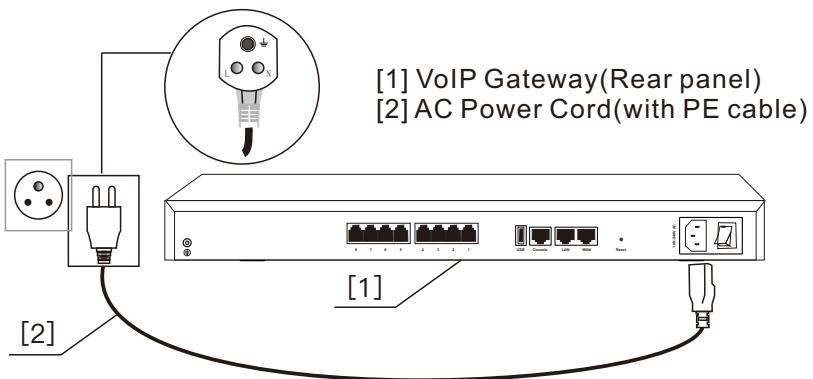


Notes:

If you intend to connect the device to the ground via the PE (Protecting Earth) cable of AC power cord, please make sure the PE (Protecting Earth) cable in the electrical outlet is well grounded in advance.

► Physical Connection

* Take G108 as an example

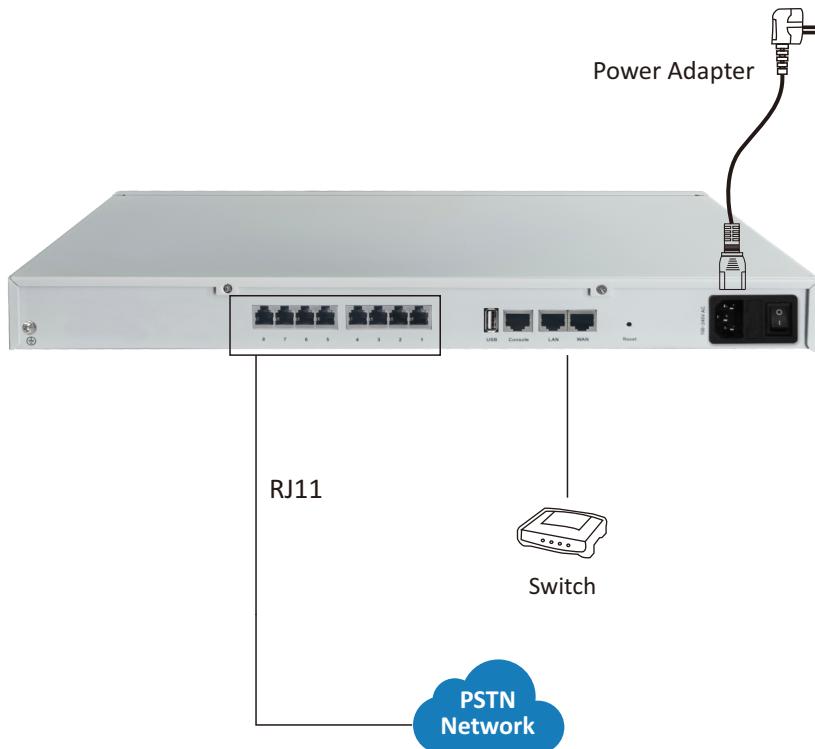

► LED Definitions

Indication	Function	Status		Explanation
PWR	Power Status	On		Power On
		Off		Power Off
SYS	System Status	Blink		System Works
		Off		System Failure
		On		System doesn't boot
WAN	WAN Data Status	Blink		Data Transfer
		Off		Disconnected
		On		Connected but no data transfer
LAN	LAN Data Status	Blink		Data Transfer
		Off		Disconnected
		ON		Connected but no data transfer
1-8/1-16	Port Status	FXO	Green	Channel loading success
			Blink	Channel ringing
			Off	Channel loading failure

Web GUI Access

► Auto-discover with Zycoo IP PBX

If you are using CooVox T series IPPBX, and the IPPBX and the gateway are both deployed in the same network segment under the same local network, please open Addons -> Exbox -> G2 Gateway in the web GUI, then use the scan feature to search and discover the gateway address.

► Using LAN/WAN port

- ① Open a web browser, preferably Firefox, Google Chrome, or Edge.
- ② Enter the gateway's default IP address into the browser address bar to access the web interface. LAN port: **http://192.168.10.100**; WAN port defaults in DHCP, if DHCP fails, it will default to **http://192.168.1.101**;
- ③ You may notice a browser security warning. Please ignore the notice and proceed to access the gateway web interface.
- ④ Use the default login credential to access the gateway. After logging in, please change the administrator password in time to ensure system security.

Default username & password: **admin**

Further Configuration



Thank you for the purchase of ZYCOO products. The above steps are basic configurations for G108/G116 FXO Gateway. For further configurations, please refer to the user manual. If you have other questions, please contact the ZYCOO local dealers or distributors from where you purchased this product.

Leading IP Phone System Provider

Zycoo Communications LLC

www.zycoo.com

© 2023 Zycoo Communications LLC All rights reserved